

2. Download SOUND4 software pack.

Please visit now the SOUND4 e-Service and download the "Sound4 Installer - V2 - xxxx.xx.xx.exe". This installation includes Remote Software, Driver and server.

Note: SOUND4 Voice L and AD versions are compatible with **Windows XP, Windows 2003 and Windows 7.**

3. Install the Softwares and Drivers

Launch "Sound4 Installer - V2 - xxxx.xx.xx.exe". After language selection, select "Full Installation" (Remote + Driver + Server), continue the installation until the end...

4. Configure the Remote Control Application

Introduction: by default during installation we have created 3 accounts:

- **1st account :** login = **admin** (password **admin**). This account is dedicated to the rights administrations, and board Ethernet configuration.
- **2nd account:** login = **studio** (no password by default). This account is dedicated to sound adjustment, input and output management (Livewire, Analog and Digital)
- **3rd account:** login = **live** (no password by default). This account is dedicated to "Live", users can only recall Users Presets and Sessions

To configure the admin account: start the "SOUND4 Remote Control" application. This displays the "SOUND4 Remote Connection" window. Click the "New" button, and enter the following information:

- **Connection Name** = admin (or what you want)
- **Radio Name** =
- **City** =
- **Num /IP** = if the Remote Control software is installed on the PC witch host the card, then simply leave "local host". If the Remote Control software is installed on a different PC, enter the IP address (or network name) of the PC witch host the card (example: 192.168.0.50).
- **User Name** = enter "admin" (this is the default administrator username).
- **Password** = enter "admin" (this is the default password).
- Now Click **OK** to memorize your connection.

Now configure the studio account: in the **SOUND4 Remote Connection** window. Click the "New" button, and enter the following information:

- **Connection Name** = studio (or what you want)
- **Radio Name** =
- **City** =
- **Num /IP** = if the Remote Control software is installed on the PC witch host the card, then simply leave "local host". If the Remote Control software is installed on a different PC, enter the IP address (or network name) of the PC witch host the card (example: 192.168.0.50).
- **User Name** = Enter "studio".
- **Password** = leave it empty (there is no password but you will be able to setup one later).
- Now Click **OK** to memorize your connection.

Now configure the Live account: In the **SOUND4 Remote Connection** window. Click the "New" button, and enter the following information:

- **Connection Name** = live (or what you want)
- **Radio Name** =
- **City** =
- **Num /IP** = if the Remote Control software is installed on the PC witch host the card, then simply leave "local host". If the Remote Control software is installed on a different PC, enter the IP address (or network name) of the PC witch host the card (example: 192.168.0.50).
- **User Name** = Enter "live".
- **Password** = leave it empty (there is no password on this account).
- Now Click **OK** to memorize your connection.

Done! You can now establish your first connection to the processor. To do this, open the **SOUND4 Remote Connection** window (if it is not already opened), select the connection you created (**admin**, **studio** or **live**) and click the "Launch" button (or double-click directly on the name of the connection you created)..... You can now have fun with your new Voice Processor.

Enjoy,

The SOUND4 Team